


# USER GUIDE

## TRAILBLAZER RACING WHEEL




BACK

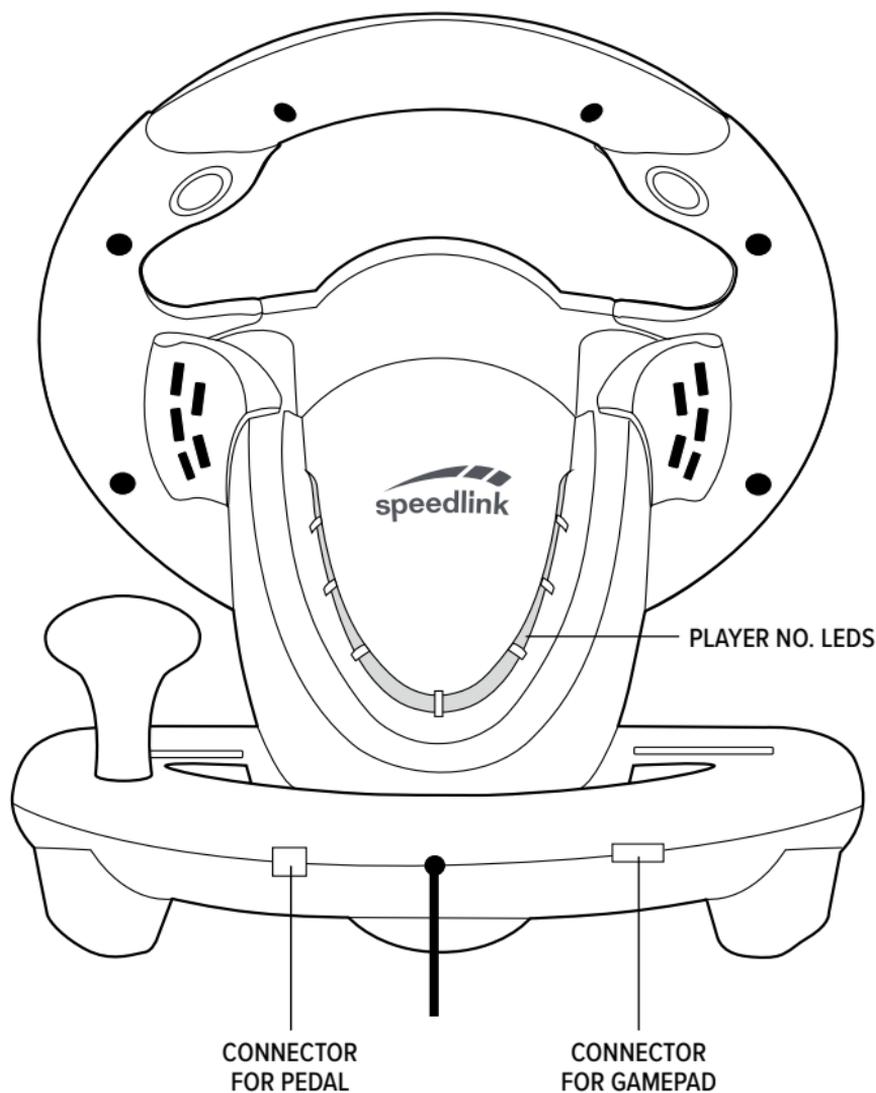


At first, please follow the instructions given in the User Guide.

1

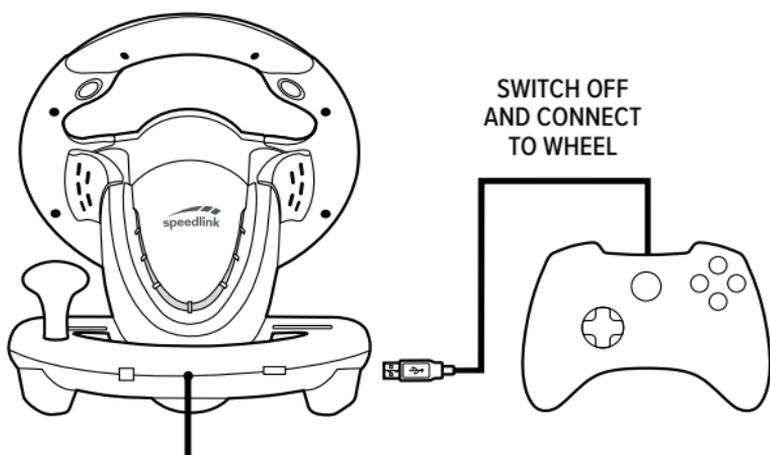

2

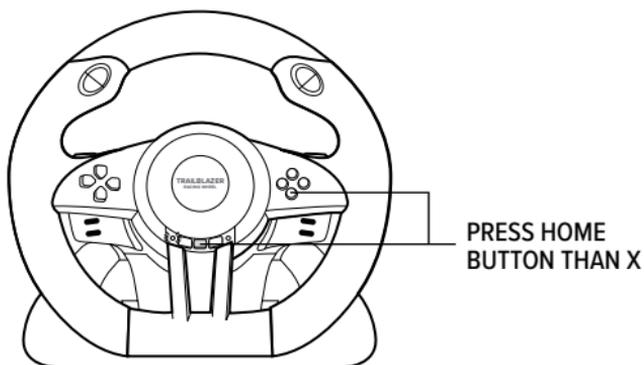


1. First connect the USB cable to the PS4\* for power supply, then use the micro-USB cable to connect the **original PS4\* gamepad** to the back USB port on the racing wheel. Now switch the console on. The LED on the racing wheel will glow red.


2. Press the HOME button, then X on the racing wheel to register the TRAILBLAZER Racing Wheel.

You can control any PS4\* racing game using the TRAILBLAZER racing wheel if you connect it as recommended. In some cases, you need to select the gamepad as the input device in the game options.

1

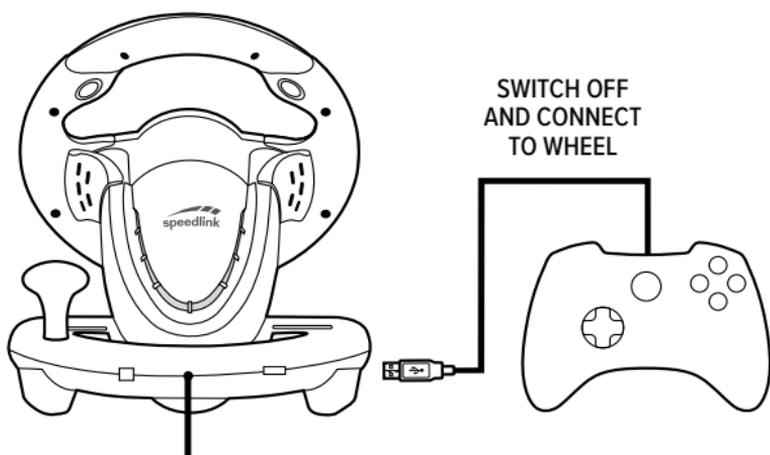

2

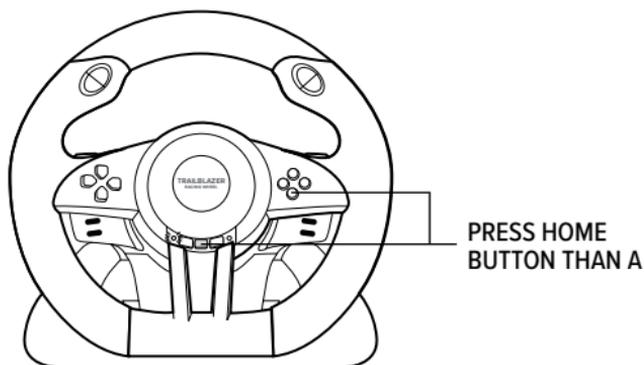


1. First connect the USB cable to the Xbox One\* for power supply, then use the micro-USB cable to connect the **original Xbox One\* gamepad** to the back USB port on the racing wheel. Now switch the console on. The LED on the racing wheel will glow red.


2. Press the HOME button, then A on the racing wheel to register the TRAILBLAZER Racing Wheel.

You can control any Xbox One\* racing game using the TRAILBLAZER racing wheel if you connect it as recommended. In some cases, you need to select the gamepad as the input device in the game options.

1

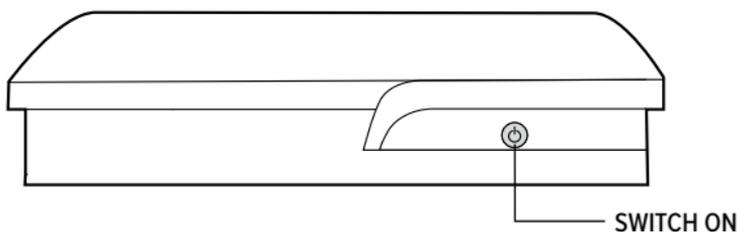


2

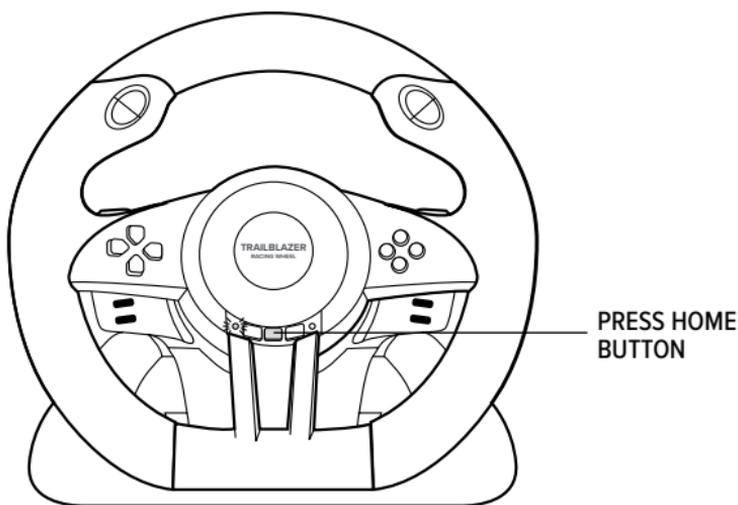


1. Switch the console on. The LED on the racing wheel will glow red.
2. Press the HOME button on the racing wheel to register the TRAILBLAZER Racing Wheel.

1

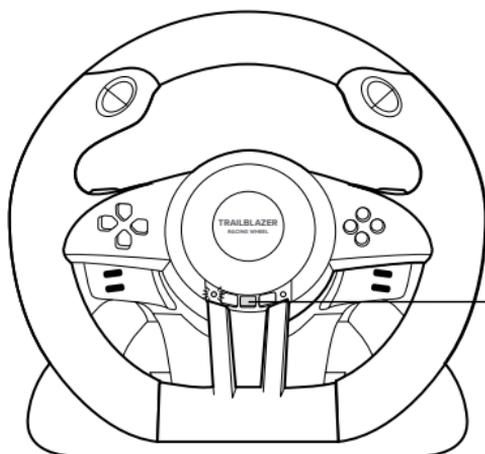

PRESS  
HOME BUTTON  
FOR 3 SEC

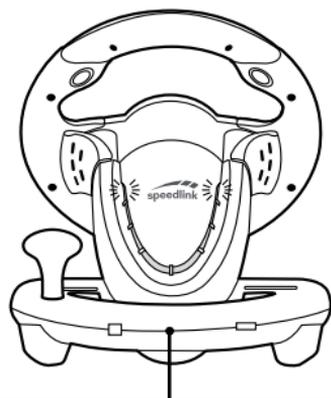


PLAYER NO. LED1 ON: XINPUT  
PLAYER NO. LED1 OFF: DIRECTINPUT\*

Download and install the TRAILBLAZER Racing Wheel driver.  
For the latest driver, go to: [www.speedlink.com](http://www.speedlink.com).

1. The HOME button lets you switch between XInput mode and digital DirectInput\* mode. To switch, press and hold the button for 3 seconds.

The player no. LED1 indicates the mode.

Most current PC racing games are compatible with the TRAILBLAZER as an input device. Special configurations in the system/operating system/game options may cause compatibility issues. In this case, before starting a game perform a test by switching between input modes (XInput/DirectInput\*) and make sure the latest drivers are installed.

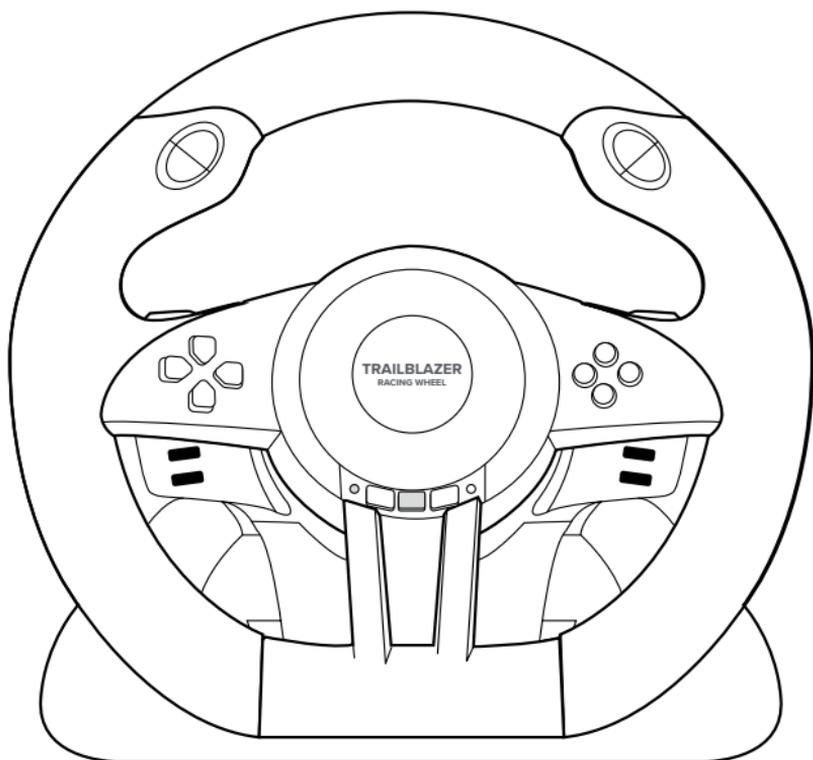

You can adjust the steering sensitivity and button maps directly on the racing wheel. For further information about these functions, go to the Speedlink website: [www.speedlink.com](http://www.speedlink.com). Be aware that racing wheels and the vibration function are only supported by some games.