

PDX 923 SUDVBT2



GOGEN



USER MANUAL

# TABLE OF CONTENTS

## Contents

<b>Table of Contents</b> .....	<b>2</b>
<b>Important Safety Instructions</b> .....	<b>3</b>
<b>Safety Precautions</b> .....	<b>4</b>
<b>Identification of Controls</b> .....	<b>5</b>
Main Unit .....	5
Remote control unit .....	6
<b>SETUP Menu Setting</b> .....	<b>8</b>
General Setup Page .....	8
Audio Setup Page .....	9
Video Setup Page .....	10
Preference Page .....	10
Password Setup Page .....	11
<b>Parameters and specifications</b> .....	<b>12</b>
System .....	12
Battery Parameters .....	12
<b>First Time Installation</b> .....	<b>13</b>
Basic Operation .....	13
<b>Technical Specifications</b> .....	<b>20</b>
<b>Troubleshooting</b> .....	<b>20</b>

## IMPORTANT SAFETY INSTRUCTIONS



**Warning:** To reduce the risk of electric shock, do not remove the cover or back. There are no user-serviceable parts inside. Refer servicing to qualified personnel.



**Warning:** To prevent fire or electric shock hazard, do not expose the unit to rain or moisture.

- Do not expose the Adaptor and portable DVD to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the unit.
- Keep the portable DVD away from direct sunlight and heat source such as radiators or stoves.
- Do not block the ventilation openings. Slots and openings on the unit are provided for ventilation. The openings should never be blocked by placing your portable DVD on a cushion, sofa or other similar surface.
- Do not place the portable DVD on unstable cart, stand, tripod, bracket or table. The unit may fall, resulting in possible damage or injury.
- Never place heavy or sharp objects on the LCD panel or frame.
- Only use the AC adaptor included with portable DVD. Using any other adapter will void your warranty
- The plug of AC adaptor is used as the disconnect device, the disconnect device shall remain readily operable.
- Unplug the power from the outlet when the unit is not in use.
- Attention should be drawn to the environmental aspects of battery disposal.



**CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



**WARNING:** The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.



**WARNING:** Excessive sound pressure from earphones or headphones can cause hearing loss.

 


**WARNING:** Only use attachments/accessories specified provided by the manufacturer, the portable DVD is supplied by AC adapter, the AC adapter is used as disconnect device, the disconnect device shall remain readily operable.



**Caution:** Danger of explosion if battery is incorrectly replaced, replaced only with the same or equivalent type (Lithium battery)

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

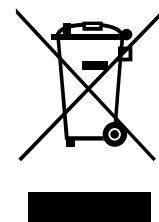

## SAFETY PRECAUTIONS



**Warning:** This digital video disc player employs a laser system. Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation Exposure.



**Warning:** To prevent direct exposure to laser beam, do not open the enclosure. Visible laser radiation when open.



**Warning:** Never stare directly into the laser beam.



**Caution:** Do not install this product in a confined space such as a book case or similar unit.



**Warning:** when the unit using by child, parents must make sure to let the child understand all contents in Instruction book how battery using to guarantee using battery correctly all the time.



**Warning:** when find battery overheat, swell or dour, please stop using battery and contact service centre for getting replacement.



**Warning:** do not charging battery on the place of insufficient ventilation such as: mattress, sofa, cushion , soft mat...



**Warning:** we will not take any responsibility if user incorrectly use battery, not following our warning instruction label on the battery case.



 
 
**Warning:** more than 250 mm USB extension cord is prohibited to use for USB port

### Notes on Copyrights:

- It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyrighted material without permission.
- This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. When recording and playing the pictures of these discs picture noise will appear. This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by macrovision Corporation. Reverse engineering or disassembly is prohibited.


### • SERIAL NUMBER:

You can find the serial number on the back of the unit. This number is unique to this unit and not available to others.

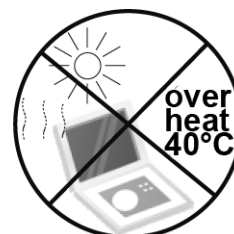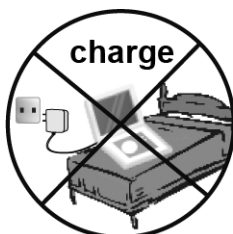



## IDENTIFICATION OF CONTROLS
 
### Main Unit

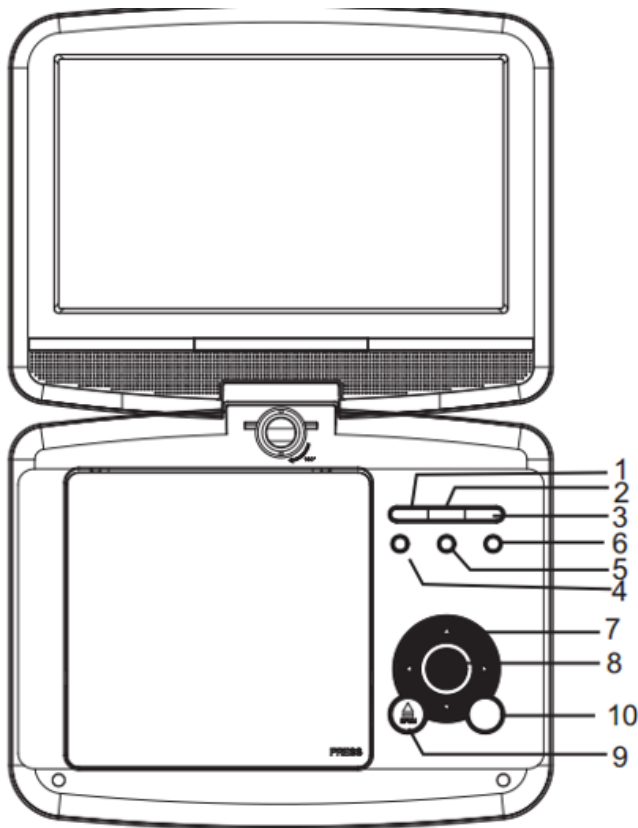


1. ▶ || PLAY/ PAUSE
  2. STOP
  3. SOURCE
  4. VOL-
  5. VOL+
  6. MENU
  7. ▲/▼/◀/▶ (up/down/right/left)  
Select an item in the menu.OK key confirms menu selection.
- When playing,VCD,DVD,if available:
- ▶: fast forward
  - ◀: fast reverse
  - ▲: previous track
  - ▼: next track

  8. ENTER
9. OPEN
10. SETUP
11. SD/MMC
12. USB
13. AV OUT
14. Earphone Socket
15. COAXIAL
16. ON/OFF
17. DC IN 9-12 V
18. ANT
19. HDMI

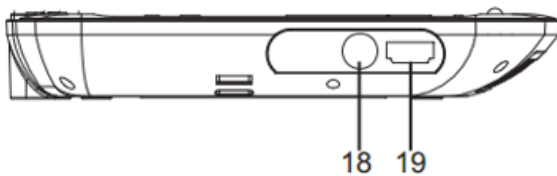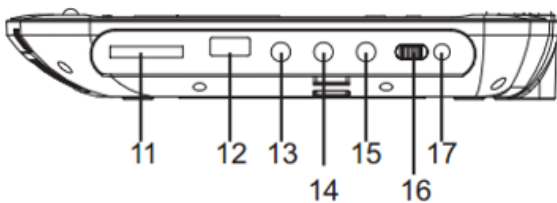

# IDENTIFICATION OF CONTROLS
 
## Remote control unit

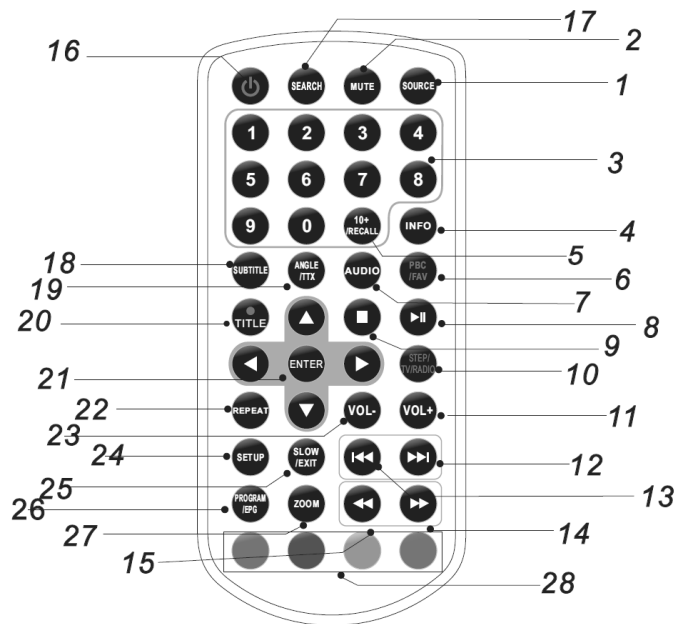

### 1. SOURCE

DVD/CARD/USB.

### 2. MUTE

Disable Audio output.

### 3. 0-9 NUMBER BUTTON

Selects numbered items in a menu.

### 4. DISPLAY

To display the playtime and status information.

### 5. 10+ BUTTON

In order to select a track 10 or greater, first press 10+, For example; select track 12, first press 10+, and then press number 2 button.

### 6. PBC/FAV

PBC on/off switch(VCD) in DVD mode.

Open Favorite Programs List Menu in DVB mode.

### 7. AUDIO

**DVD**: Press AUDIO repeatedly during playback to hear a different audio language or audio track, if available.

**CD VCD**: Press AUDIO repeatedly during playback to hear a different audio channel (Left,Right,Mix,Stereo).

### 8. PLAY/PAUSE

Press PLAY/PAUSE once to pause playback, pressing PLAY/PAUSE second time will resume the playback.

### 9. STOP

When this button is pressed once, the unit records the stopped point, from where playback will resume if PLAY (▶ ||) is pressed afterwards. But if STOP button is pressed again instead of PLAY (▶ ||) button, there will be no resume function.

### 10. STEP/TV/RADIO

Step the motion in DVD mode.

Switch between TV and Radio source in DVB mode.

**11. VOL+****23. VOL-**

Adjust volume

**12. Forward Skip**

Go to next chapter/ track.

**13. Reverse Skip**

Go to previous chapter/ track to the beginning.

**14. ►► BUTTON**

Press ►► BUTTON allow skipping ahead at 5-level speed (X2->X4->X8->X16->X32->PLAY), press PLAY button return to normal playback.

**15. ◀◀ BUTTON**

Press ◀◀ BUTTON allow skipping back at 5-level speed (X2->X4->X8->X16->X32 PLAY), press PLAY button return to normal playback.

**16. **

Turn on/off the power.

**17. SEARCH**

Goto time point, title or chapter you want in DVD Mode.

**18. SUBTITLE**

Press SUBTITLE repeatedly during playback to hear a different subtitle languages.

**19. ANGLE**

**DVD**: Press ANGLE will change the view angle, on DVDs that support this feature.

**20. ●/ TITLE**

DVB Enter Record

Return to DVD title menu.

**21. ENTER**

Confirms menu selection.

**22. REPEAT**

Press REPEAT during playback to select a desired repeat mode.

**DVD**: you can play select repeat chapter/title/off.

**CD** **VCD**: you can select repeat single/all/off.

**MP3**: you can select repeat single/folder/off.

**24. SETUP**

Accesses or removes setup menu.

**25. SLOW**

Press Slow button repeatedly to enter slow playback, and cycle between different speeds. The speeds are 1/2, 1/4, 1/8, 1/16, and normal.

**26. PROGRAM**

**DVD** **VCD**: The program function enables you to store your favourite tracks from the disc.

Press PROGRAM button, then PROGRAM MENU will appear on screen, now you can use the number key to direct input the titles, chapters or tracks number and select PLAY option.

TO resume normal playback, press PROGRAM and select clear program option on the program menu, press PROGRAM again to exit program menu.

## 27. ZOOM

**DVD VCD:** Use ZOOM to enlarge or shrink the video image.

1. Press ZOOM during playback or still playback to activate the Zoom function. The square frame appears briefly in the right bottom of the picture.
2. Each press of the ZOOM button changes the TV screen in the following sequence:

2X size → 3X size → 4X size → 1/2X size → 1/3X size → 1/4X size → normal size

**JPEG:** Use ZOOM to enlarge or shrink the picture.

1. Press 'ZOOM' .
2. Used "▶▶" to enlarge, or "◀◀" to shorten the picture. Use the ▲ ▼ ◀ ▶ button to move through the zoomed picture.

## 28. RED/GREEN/YELLOW/BLUE KEY

Some specific function in DVB mode. **SETUP MENU SETTING**

### GENERAL SETUP PAGE

Press SETUP button to get the setup menu. Use direction buttons ▲ ▼ ◀ ▶ to select the preferred item. After finishing settings, press SETUP again to normal display. The following menu items can be changed:

**GENERAL:** selects the GENERAL PAGE menu.

 
**AUDIO:** selects the AUDIO PAGE menu.

**VIDEO:** selects the VIDEO PAGE menu.

**PREFERENCE:** selects the PREFERENCE PAGE menu.

**PASSWORD:** selects the PASSWORD PAGE menu.

#### • General Setup Page

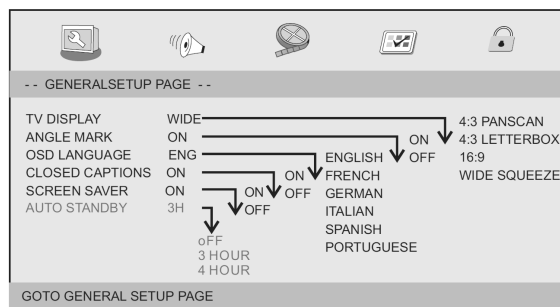

- **TV DISPLAY:** selects the aspect ratio of the playback picture.

**4:3 PANSCAN:** if you have a normal TV and want both sides of the picture to be trimmed or formatted to fit your TV screen.

**4:3 LETTERBOX:** if you have a normal TV. In this case, a wide picture with black bands on the upper and lower portions of the TV screen will be displayed.

**16:9:** wide screen display.

**Wide Squeeze:** Set screen mode to 4:3.

- **Angle Mark**

Displays current angle setting information on the right hand corner of the TFT screen if available on the disc.

- **OSD Language**

You can select your own preferred language settings.



- **Closed Captions**

Closed captions are data that are hidden in the video signal of some discs. Before you select this function, please ensure that the disc contains closed captions information and your TV set also has this function.

- **Screen Saver**

This function is used to turn the screen saver On or Off.

### **Auto Standby**

This function is used to select auto standby settings after 3 or 4 hours.

 
**3 HOURS:** the unit will turn to standby mode after 3 hours if there is no interaction from user within this period of time.

**4 HOURS:** the unit will turn to standby mode after 4 hours if there is no interaction from user within this period of time.

**OFF:** the auto standby function is disabled, and unit will stay in "on" mode even if no interaction from user.

## **AUDIO SETUP PAGE**

### **Audio Setup Page**

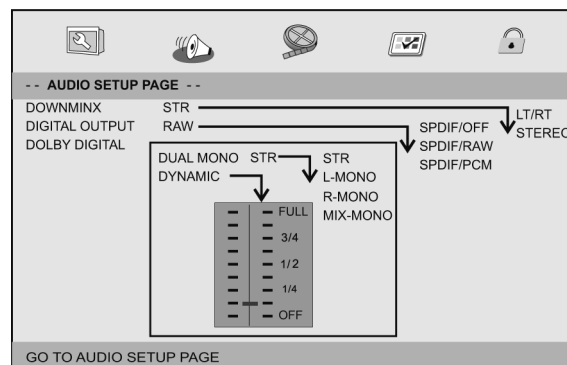

- **Downmix**

This options allows you to set the stereo analog output of your DVD Player.

- **LT/RT:** Select this option if your DVD Player is connected to a Dolby Pro Logic decoder.
- **Stereo:** Select this option when output delivers sound from only the two front speakers.

- **Digital Output**

The function is used to select the SPDIF Output: SPDIF Off, SPDIF/RAW, SPDIF/PCM.

- **SPDIF Off:** Turns off the SPDIF output.
- **SPDIF/RAW:** If you have connected your DIGITAL AUDIO OUT to a multi-channel decoder/receiver.
- **SPDIF/PCM:** Only if your receiver is not capable of decoding multi-channel audio.

- **Dolby digital**

The options included in Dolby Digital Setup are: 'Dual Mono' and 'Dynamic'.


- **Dual Mono**

- **Stereo:** Left mono sound will send output signals to Left speaker and Right mono sound will send output signals to Right speaker.
- **L-Mono:** Left mono sound will send output signals to Left speaker and Right speaker.
- **R-Mono:** Right mono sound will send output signals to Left speaker and Right speaker.
- **Mix-Mono:** Left and Right mixed mono sound will send output signals to Left and Right speakers.

- **Dynamic**  
Dynamic range compression.

## VIDEO SETUP PAGE

 
- **Video Setup Page**

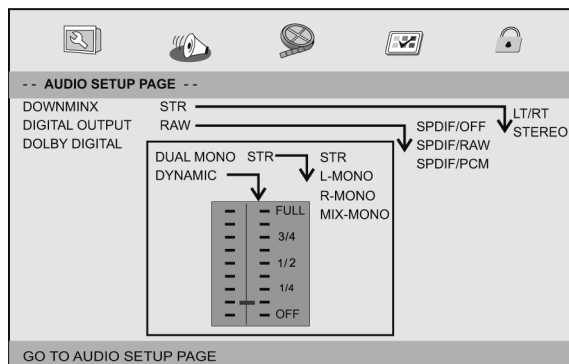

Sharpness, Brightness, Contrast, Hue, Saturation: setting the video quality.

## PREFERENCE PAGE

 - **Preference Page**

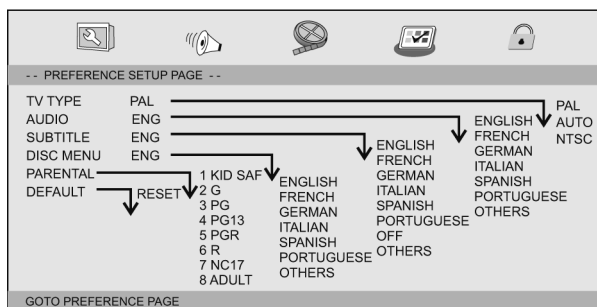

- **TV Type**

Selecting the colour system that corresponds to your TV when AV outputs.

This DVD Player is compatible with both NTSC and PAL.

**PAL** - Select this if the connected TV is PAL system. It will change the video signal of a NTSC disc and output in PAL format.

**NTSC** - Select this if the connected TV is NTSC system. It will change the video signal of a PAL disc and output in NTSC format.

**Auto:** Change the video signal output automatic according to the playing disk format.

- **Audio:** Selects a language for audio (if available).
- **Subtitle:** Selects a language for subtitle (if available).
- **Disc Menu:** Selects a language for disc menu (if available).


- **Parental**

Some DVDs may have a parental level assigned to the complete disc or to certain scenes on the disc. This feature lets you set a playback limitation level. The rating levels are from 1 to 8 and are country dependent. You can prohibit the playing of certain discs that are not suitable for your children or have certain discs played with alternative scenes.

- **Default:** Back to the factory setting.


## PASSWORD SETUP PAGE
 
### • Password Setup Page

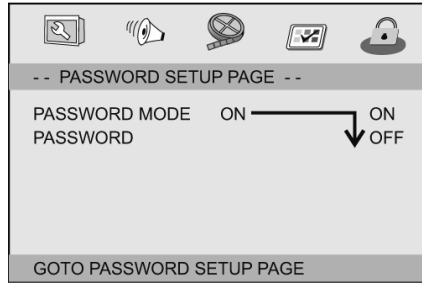

- **Password mode:** Set password mode on/off. If set to off, change parental level will not check password.

 **Password:** select the menu password change page.

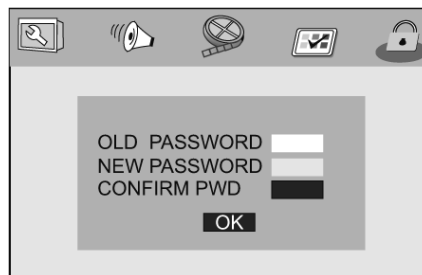

**OLD PASSWORD:** Enter the OLD password, (Factory setting is 1369), and the cursor will jump automatically to NEW PASSWORD.

**NEW PASSWORD:** Enter the NEW password. Enter 4 digits from the remote control unit numeric buttons, and the cursor will automatically jump to CONFIRM PASSWORD.

**CONFIRM PASSWORD:** Confirm the NEW password by entering it again. If the confirmation is incorrect, the cursor will stay in this column. After entering, the correct new password again, the cursor will jump automatically to OK.

**OK:** When cursor is on this button, press ENTER key to confirm setting.

**Note:** If the password has been changed, the parental and disc lock code will also be changed. The default password(1369) is always active even the password has been changed.

# PARAMETERS AND SPECIFICATIONS

## Electronical parameters

Item		Standard requirement
<b>Power requirements</b>		: AC 100-240 V, 50/60 Hz
<b>Power consumption</b>		: <12 W
<b>Operating humidity</b>		: 5 % to 90 %
<b>Output</b>	<b>VIDEO OUT</b>	: 1 Vp-p (75 Ω)
	<b>AUDIO OUT</b>	: 1.4 Vrms (1 KHz, 0 dB)
	<b>Audio</b>	: Speaker:1WX2,Headphones output

## System

<b>Laser</b>	: Semiconductor laser, wavelength 650 nm
<b>Signal system</b>	: NTSC / PAL
<b>Frequency response</b>	: 20 Hz to 20 kHz (1dB)
<b>Signal-to-noise ratio</b>	: More than 80 dB (ANALOG OUT connectors only)
<b>Dynamic range</b>	: More than 85 dB (DVD/CD)

## Battery Parameters

Battery Specifications:

Output: 7.4 V

Standard charge time: 3 h ~ 4 h (Varies according to battery capacity)

Discharge Time: About 2 h (Varies according to battery capacity)

Storage and work circumstances:

1. Storage circumstances		
6 months	Temperature -20°C ~ +45 °C	Humidity 65±20 %
1 week	-20°C ~ +65 °C	65±20 %
2. Work circumstances		
Standard charge	Temperature 0°C ~ +45 °C	Humidity 65±20 %
Standard discharge	-20°C ~ +65 °C	65±20 %

## FIRST TIME INSTALLATION

After all connections have been made properly, switch on TV and make sure the receiver is connected to the Main Power. Press Power Button to switch receiver on. If you are using the receiver for the first time or restored to Factory Default, the Main Menu will appear on your TV screen.

 


- 1) Select [OSD Language] and press RIGHT/LEFT key to select a language.
- 2) Select [Country] and press RIGHT/LEFT key to select your country of residence.
- 3) Select [Channel Search] and press RIGHT or OK key to begin Automatic channel search.
- 4) Once channel tuning is complete, you are now ready to watch TV.

## BASIC OPERATION


### PROGRAM MANAGE SETTINGS

To access the Menu, press the MENU button and select [Program]. The Menu provides options to adjust the Program Manage Settings. Select an option and press OK or RIGHT to adjust that setting. Press the EXIT button to exit the Menu.

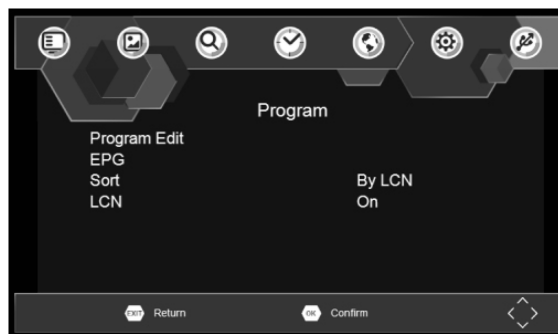

### PROGRAM EDIT

 To edit your program preferences (lock, skip, favourite, move or delete), you will need to enter the Program Edit Menu. This Menu requires a password to access. Enter the default password "000000".

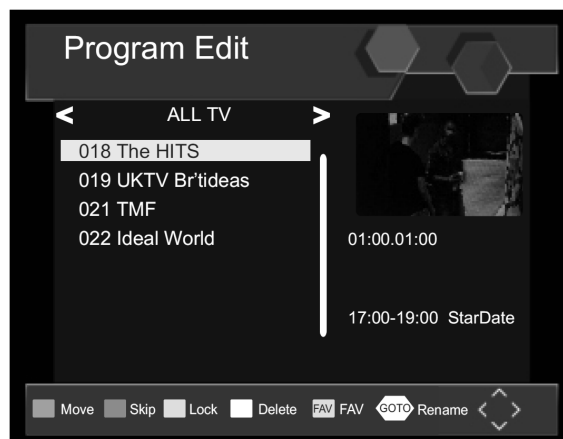

### Set Favourite Program/s

You can create a shortlist of favourite programs that you can easily access. Set Favourite TV or Radio program:

- 1) Select the preferred program then press the PAVOURITE button. A heart-shaped symbol will appear and the program is marked as a favourite.
- 2) Repeat the previous step to select more Favourite programs.
- 3) To confirm and exit the Menu, press the EXIT key.

Disable Favourite TV or Radio Program: Press the FAV button on the Remote Control with the heart-shaped symbol.

View Favourite Programs:

- 1) Press the Fav button and the Favourite Menu will appear.
- 2) Press UP/DOWN to select your Favourite Programs.
- 3) Press OK to select your favourite program.

### Delete a TV or Radio Program/s

- 1) Select the Program and then press the BLUE button. A message will appear. Press OK to delete the program.
- 2) Repeat the previous step to select more programs to delete.

### Skip TV or Radio Program/s

- 1) Select the program you would like to skip and press the GREEN button. A skip symbol is displayed. The program is marked as a skip.
- 2) Repeat the previous step to select more programs.
- 3) To confirm and exit the menu, press EXIT key.

Disable a skip TV or Radio Program: Press the GREEN button on the skip program with the skip symbol.

### Move a TV or Radio Program/s

- 1) Select the preferred program then press the RED button. A move symbol will appear.
- 2) Press UP/DOWN to move the program.
- 3) Press OK to confirm.
- 4) Repeat the above steps to move more channels.

### Lock Program/s

You can lock selected programs for restricted view.

Lock a TV or Radio Program:

- 1) Select the preferred program then press the YELLOW button. A lock-shaped symbol is displayed. The program is now marked as locked.
- 2) Repeat the previous step to select more programs.
- 3) To confirm and exit the menu, press the EXIT button.
- 4) Press the YELLOW button to disable the locked program.
- 5) To view the locked program, you will be required to enter either the default.

## EPG (ELECTRONIC PROGRAM GUIDE)

The EPG is an on-screen TV guide that shows scheduled programs seven days in advance for every tuned channel. Press the EPG button on the Remote Control to access guide.



You can use the UP/DOWN key to select the preferred program. If there is more than one page of information, use the BLUE button for page up and the YELLOW button for page down.

## SORT

Sort your channels from the following options:

[LCN] - Sort the channels in ascending order.

[Name] - Sort the channels in alphabetical order.


[Service ID] - Sort the channels according to the station.

## LCN (LOGICAL CHANNEL NUMBER)

Set LCN on or off.

## VIDEO SETTING

 To access the Menu, press MENU then select [Picture]. The Menu provides options to adjust the video settings. Press UP/DOWN to select an option and press RIGHT/LEFT to adjust that setting. Press EXIT to exit the menu.

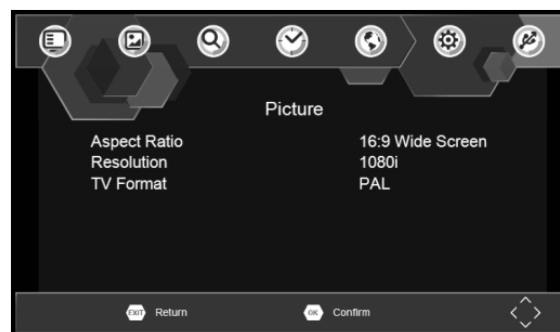

### Aspect Ratio

You must set the display format to either 4:3 PanScan, 4:3 Letter Box, 16:9 Full Screen or Auto to get the maximum display when watching TV.

### Resolution

If the video does not appear correctly, change the setting. This setting is to match the most common setting for HDMI.

[480i]: for NTSC system TV.

[480P]: for NTSC system TV.

[576i] for PAL system TV.

[576P]: for PAL system TV.

[720P]: for NTSC or PAL system TV.

[1080I]: for NTSC or PAL system TV.

[1080P]: for NTSC or PAL system TV.

## TV format

 
If the video does not appear correctly, you need to change the settings. This should match the most common setting for TVs in your country.

[NTSC]: for NTSC system TV.

[PAL]: for PAL system TV.

## CHANNEL SEARCH


To access the menu, press MENU and select [Search Channel]. The Menu provides options to adjust the Search Channel settings. Select an option and press RIGHT/LEFT to adjust the settings. Press EXIT to exit the Menu.

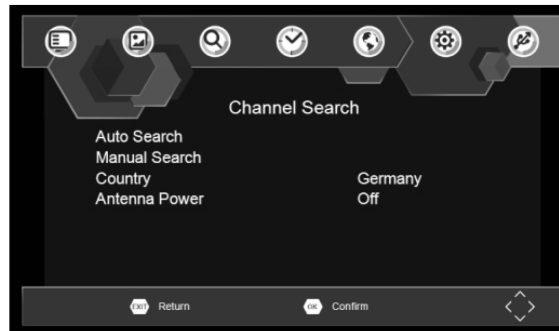

## Auto Search

Search and install all channels automatically. This option overwrites all preset channels.

 - 1) Select [Auto Search] and press OK or RIGHT to start channel search.
- 2) To cancel channel search, press EXIT.

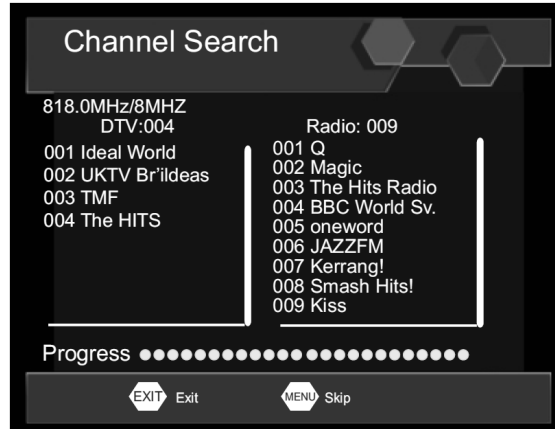


## Manual Search

Install new channels manually. This option adds new channels without changing the current channels list.

 - 1) Select [Manual Search] then press OK or RIGHT. The channel search screen will appear.



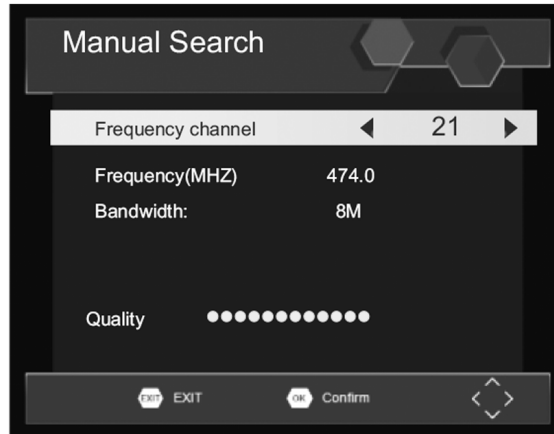

2) Press the RIGHT/LEFT key to select the channel frequency.

3) Press OK to start searching channels.

If a channel is found, it is saved and added to the channels list. If channels can't be found, then exit the menu.

### Country

Select your country of residence.

### Antenna power

Enable Antenna Power if an external active antenna is connected.

### Country

Select your country of residence.

## TIME SETTING

To access the Menu, press MENU then select [Time]. The Menu provides options to adjust the time settings. Press UP/DOWN to select an option and press RIGHT/LEFT to adjust the settings. Press EXIT to exit the menu.



### Time offset

Select auto or manual for GMT offset adjustments.

### Country Region

 
Select the Country Region when [Time Offset] is set to Auto.

### Time Zone

Select the Time Zone Offset when [Time Offset] is set to Manual.

## OPTION

To access the Menu, press MENU and select [Option]. The menu provides options to adjust the OSD Language, Subtitle Language and Audio Language. Select an option and press RIGHT/LEFT to adjust the setting. Press EXIT to exit The Menu.

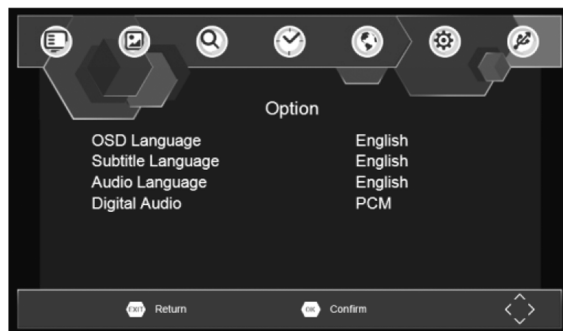

### **OSD Language**

Select an OSD language.

### **Audio Language**

Select the preferred audio language for watching TV channels. If the language is not available, the default program language will be used.

### **Subtitle Language**

 
Select the preferred subtitle language.

### **Digital Audio**

Set the desired audio format at the HDMI slot: PCM, Raw HDIM On, Raw HDMI Off, Off (if available).

## **SYSTEM SETTING**

To access the Menu, press MENU and select [System]. The menu. Provides options to adjust the system settings. Press the UP/DOWN key to select an option and press RIGHT/LEFT to adjust the setting. Press EXIT to exit the Menu.

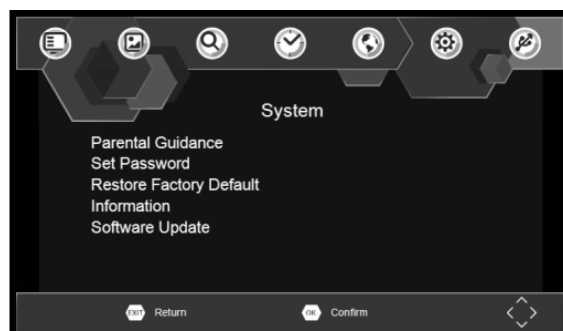

### **Parental Guidance**

You can restrict access to channels that are unsuitable for children. To restrict/lock the channel you will need to enter either the default password "000000" or your own password.

### **Set Password**

Set or change the password for Locked programs. Enter your old Password or the default password "000000". You will then be asked to enter your new password. To confirm re-enter your new password. Once it is confirmed, press EXIT to exit the Menu.

### **Restore Factory Default**

Reset your Set Top Box to the Default Factory Settings. In Main Menu select [Restore Factory Default] and press OK or RIGHT to select. Enter your password or the default password "000000" and press OK to confirm. This option will delete all preset channels and settings.

### **Information**

View model, hardware and software information.

### **Software update**

If the status is set "ON", it will begin searching for new software from broadcast according to your preferred time in "Start Time".

## USB

To access the Menu, press the Menu button and select USB.



### Multi-Media

Switch to USB mode and plug in USB to view files.

### Photo Configure

Set the parameters for viewing photographs.

### Movie Configure

Set the parameters for displaying movie subtitles.

### PVR Configure

Set the parameters for record device.

## TECHNICAL SPECIFICATIONS

Item	Sub Item	Parameter
Tuner	Input Frequency	170 ~ 230 MHz 470 ~ 860 MHz
	RF Input level	-79 dBm(T),-75 dBm(T2)
	IF Bandwidth	7 MHz and 8 MHz
	Modulation	QPSK, 16QAM, 64QAM 128QAM(T2), 256QAM(T2)
Video	Decoder Format	MPEG4 AVC/H.264 HP@L4 HEVC/H.265 HT@L4 MPEG2 MP@ML.HL
	Output Format	480i, 480p,576i, 576P, 720P, 1080i, 4:3 and 16:9
	Output Port	HDMI
Dimensions	250 x 42 x 193 mm	
Weight (NET)	923 ± 10 g	

## TROUBLESHOOTING

Problem	Potential Reasons	What to do
No picture	Power isn't connected	Connect the power
	The power switch is not on	Switch on the power
Screen shows "No Signal"	Not connect DVB-T cable	Plugin the DVB-T cable
	Incorrect setting	Reset setting
No sound from speaker	Sound on mute	Turn off mute function
	Incorrect sound track	Try another sound track
Only sound, no image on the screen	No or incorrect connection with AV cable	Make sure cables are connected correctly
	The program is a radio program	Press <TV/RADIO> key to shift into TV mode
Remote Control is not responding	The battery is exhausted	Change battery
	Remote Control is not facing or close enough to the Set Top Box	Adjust the position on the Remote Control and move closer to the unit
The image stopped suddenly or mosaic	The signal is too weak	Strengthen the signal

## WARRANTY

Our product is warranted for 2 full year from the date of purchase. The warranty is provided on all material defects and workmanship. Guarantee of 24 months does not apply to decrease in the accumulator's effective capacity caused by its use or age. Effective capacity gradually decreases depending on the method of use of the accumulator.

## WE RESERVE THE RIGHT TO CHANGE TECHNICAL SPECIFICATIONS.



WARNING: DO NOT USE THIS PRODUCT NEAR WATER, IN WET AREAS TO AVOID FIRE OR INJURY OF ELECTRIC CURRENT. ALWAYS TURN OFF THE PRODUCT WHEN YOU DON'T USE IT OR BEFORE A REVISION. THERE AREN'T ANY PARTS IN THIS APPLIANCE WHICH ARE REPARABLE BY CONSUMER. ALWAYS APPEAL TO A QUALIFIED AUTHORIZED SERVICE. THE PRODUCT IS UNDER A DANGEROUS TENTION.



TO AVOID DANGER OF SUFFOCATION, KEEP THE PLASTIC BAG AWAY FROM BABIES AND CHILDREN. DO NOT USE THIS BAG IN CRIBS, BEDS, CARRIAGES OR PLAYPENS. THIS BAG IS NOT A TOY.

## Disposal of old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Hereby, ETA a.s. declares that the radio equipment type PDX923SUDVBT2 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [http://www.gogen.cz/declaration\\_of\\_conformity](http://www.gogen.cz/declaration_of_conformity)



GoGEN