


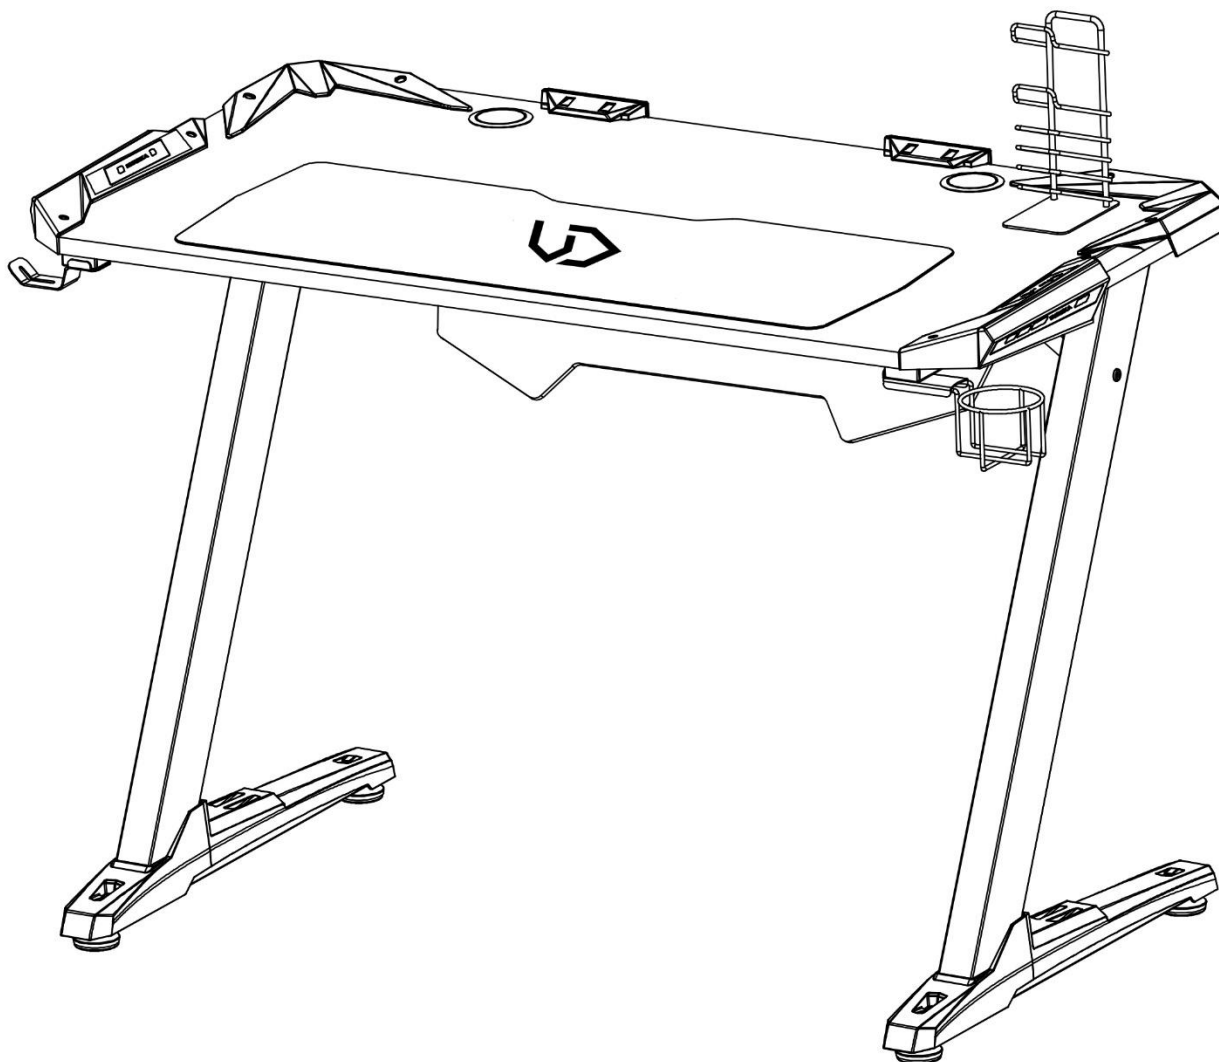









# ULTRADESK<sup>®</sup>


## SPACE

 

User Guide  
Anleitung  
Instrukcja Obsługi






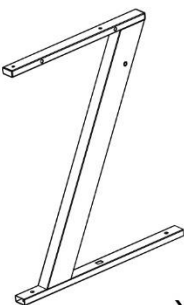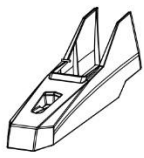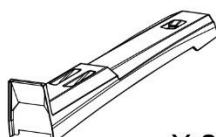

 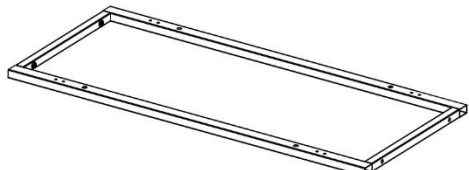

 
- ①  X 6
- ②  X 8
- ③  X 6
- ④  X 4
- ⑤  X 8

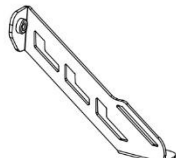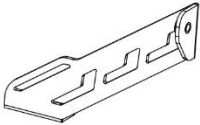
- A  X 2
- B  X 2
- C  X 2

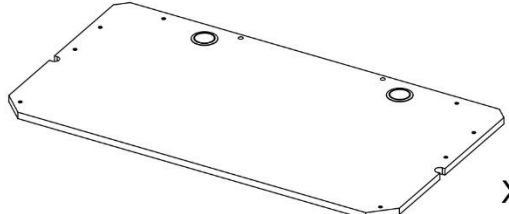

- D  X 1


- E  X 1
- F  X 1


 
- G  X 1

- H  X 1
- I  X 1
- J  X 2
- K  X 1
- L  X 1
- M  X 2
- N  X 2

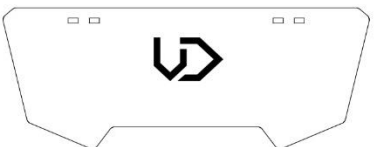- O  X 1

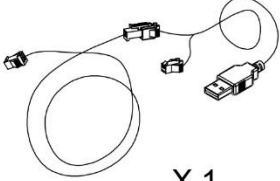- P  X 1
- Q  X 4

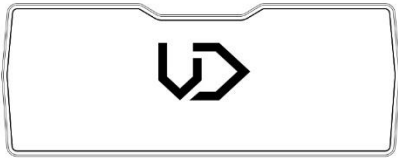- R  X 1


- S  X 1
- T  X 2




screwdriver not included  
 Schraubendreher im Set nicht enthalten  
 śrubokręt nie znajduje się w zestawie




1.

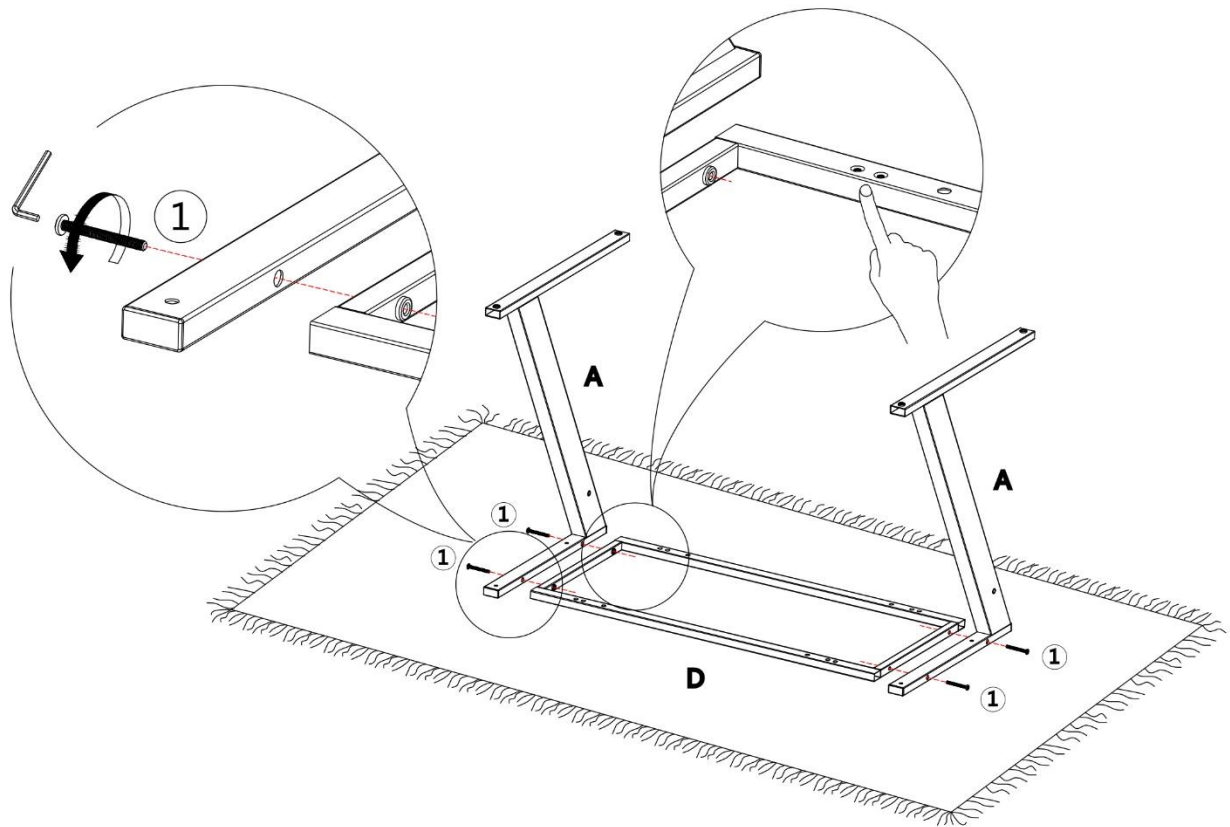


2.

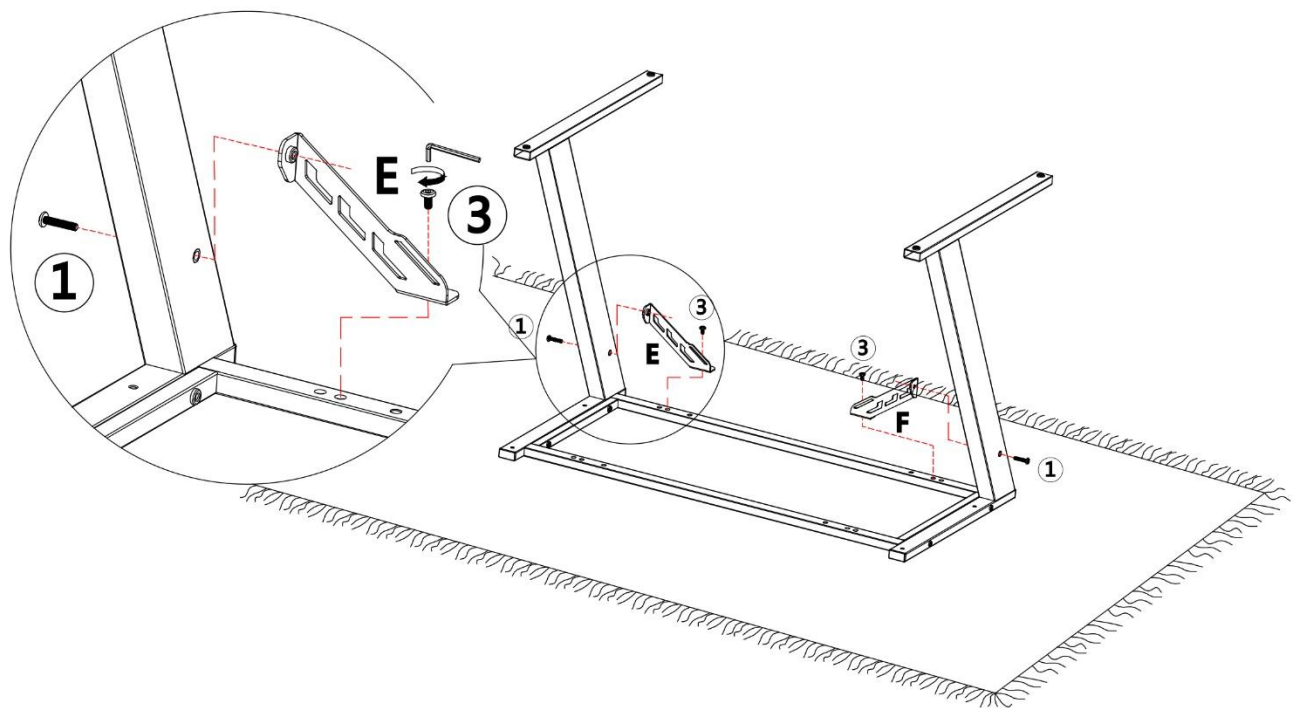


**3.**

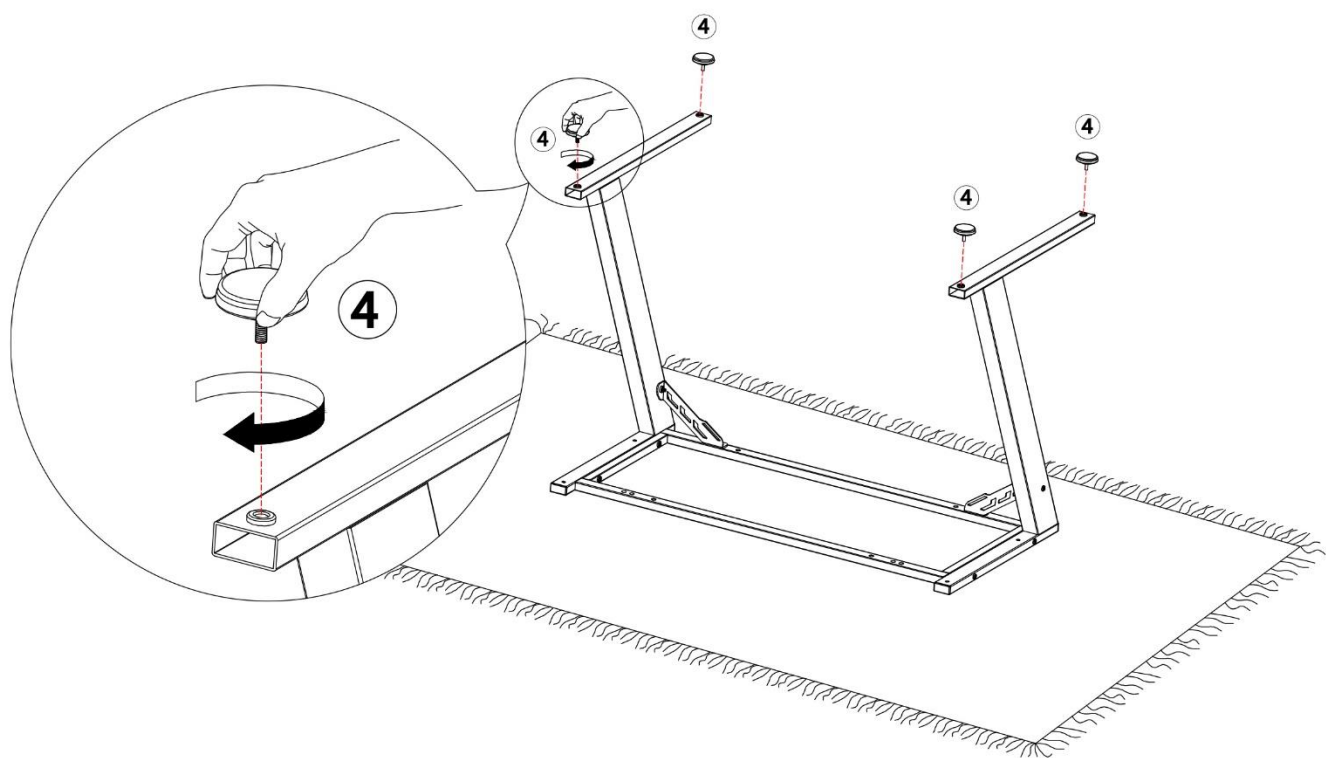


**4.**

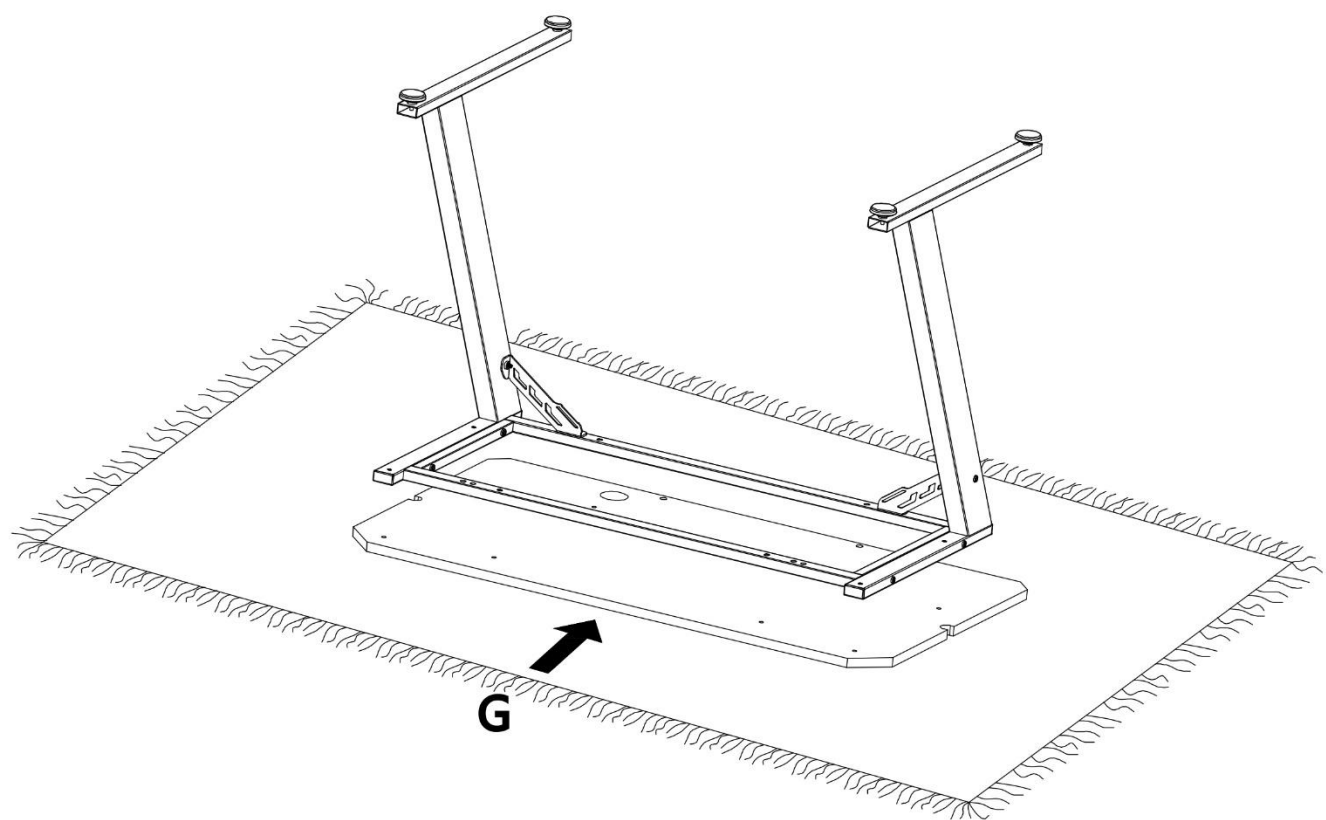


5.

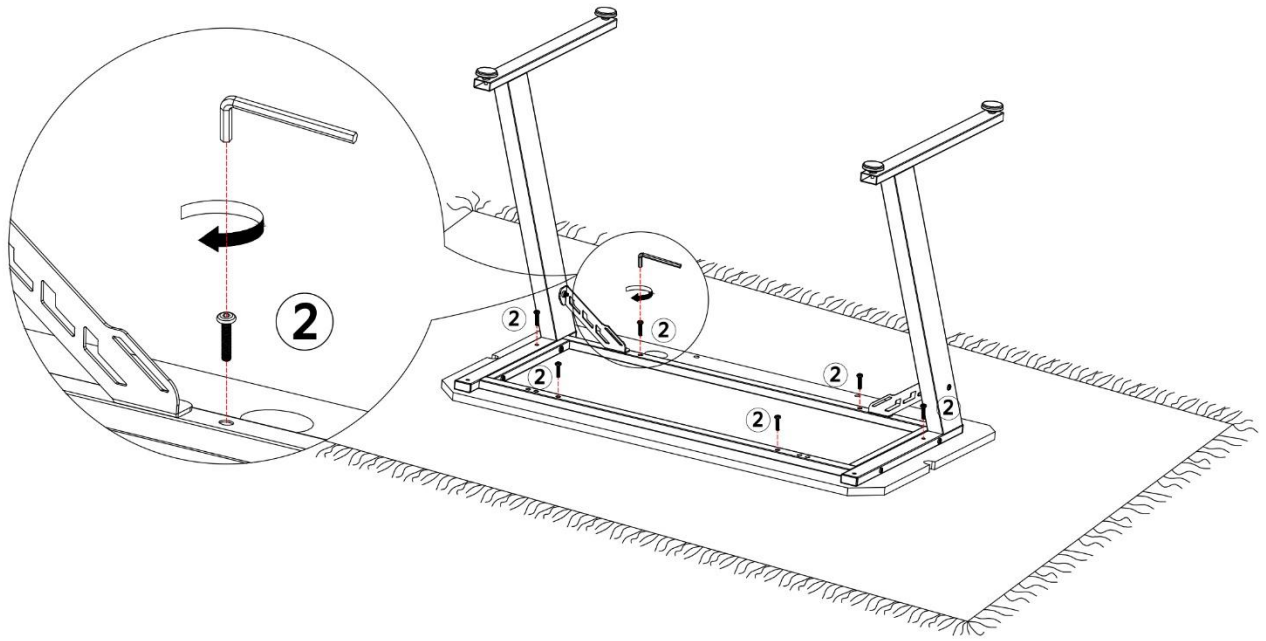


6.

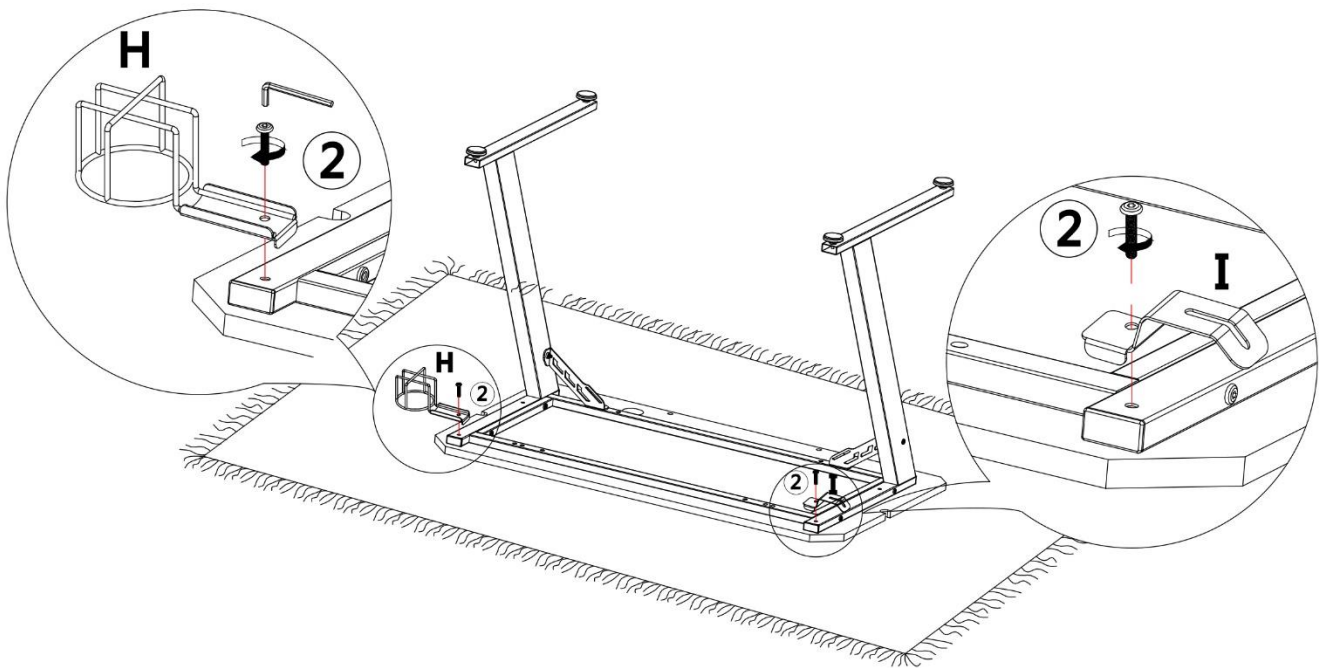


7.

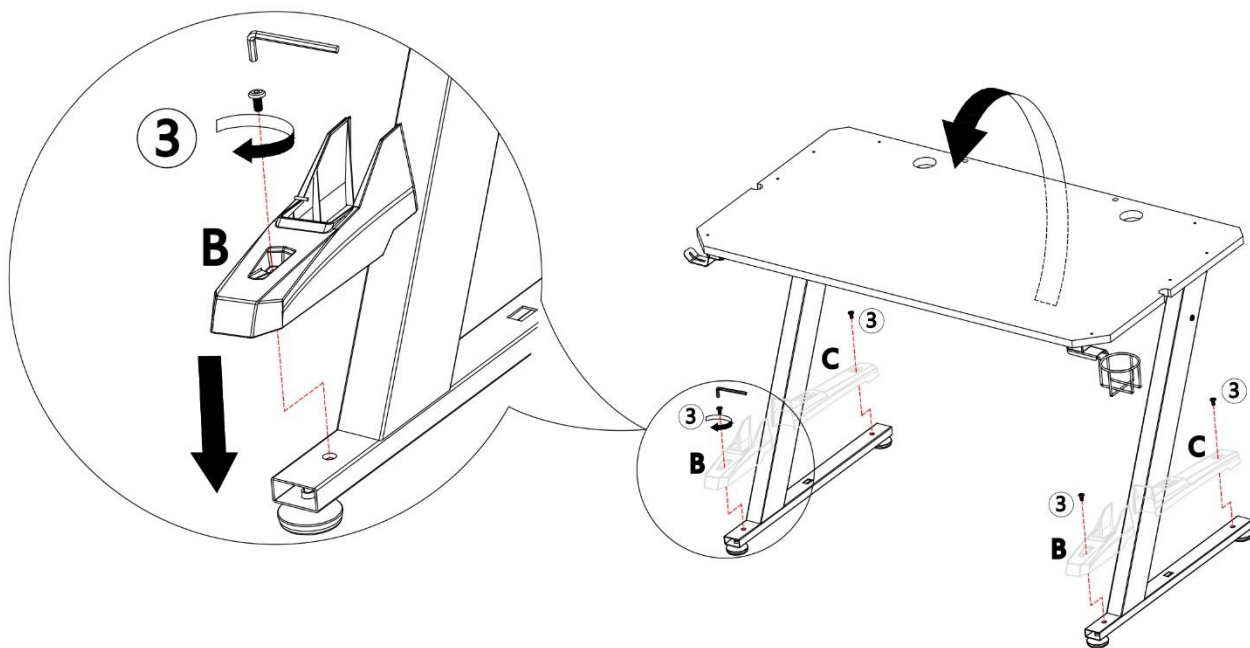


8.

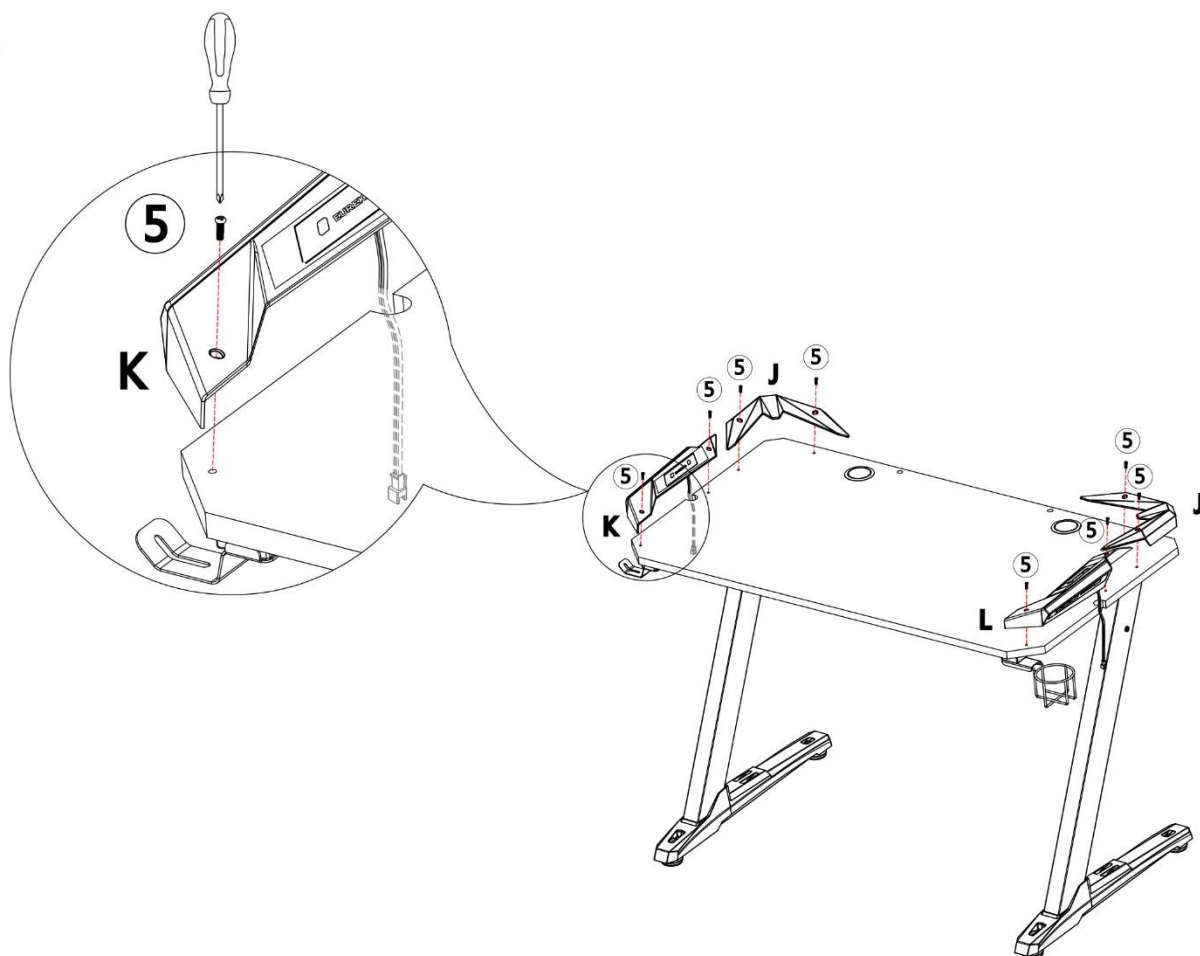

9.

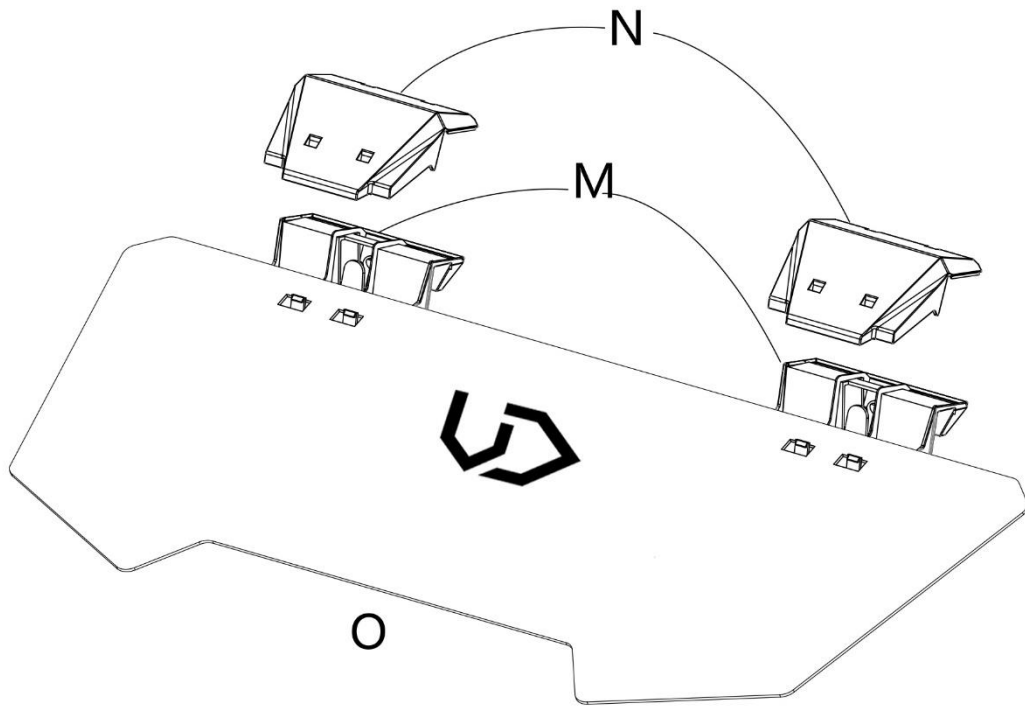


10.

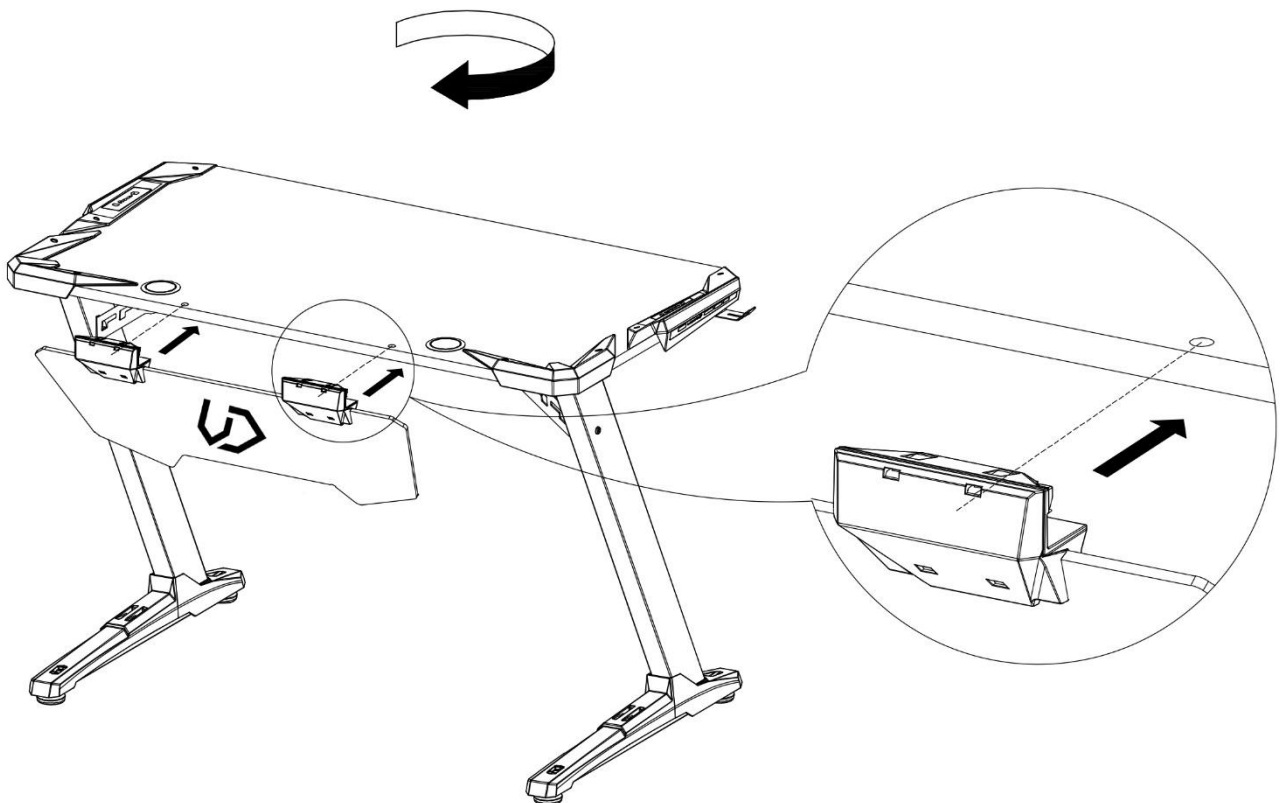



11.

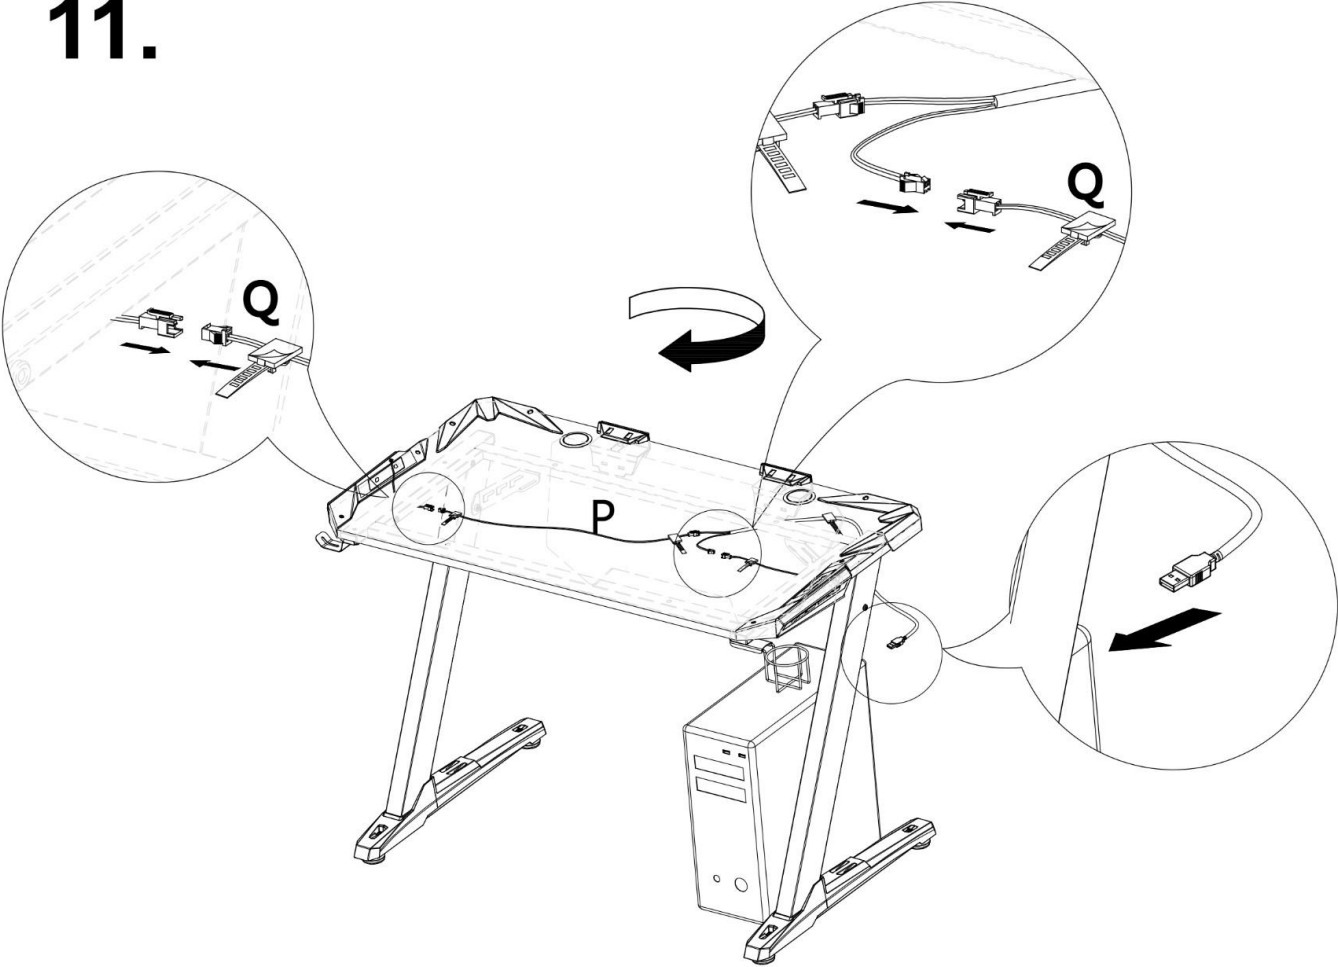

12.

