 


# Lenco

## STEREO FM RADIO WITH CD PLAYER SCD-24

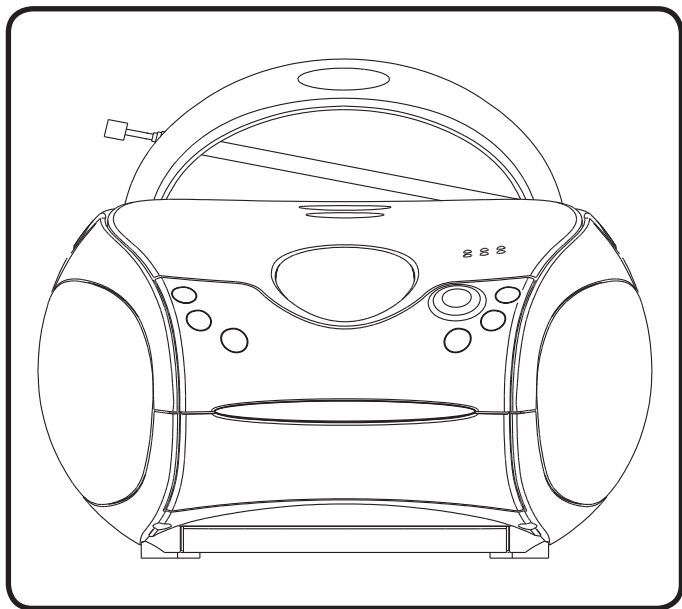

### INSTRUCTION MANUAL

For information and support, [www.lenco.com](http://www.lenco.com)

## WARNING

### CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT  
APPAREIL À LASER DE CLASSE 1  
PRODUCTO LASER DE CLASE 1

CAUTION  
INVISIBLE LASER RADIATION  
WHEN OPEN AND INTERLOCKS  
DEFEATED.  
AVOID EXPOSURE TO BEAM



This product contains a low power laser device.

**Warning: Do not touch the lens.**

**DO NOT THROW BATTERIES IN FIRE !**

## PRECAUTIONS

Follow the advice below for safe and appropriate operations.

### ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty, or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on a carpet.

### ON SAFETY

- When connecting and disconnecting the AC cord, grip the plug and not the cord itself. Pulling the cord may damage it and create hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power cord.

### ON AC VOLTAGE

- Before use, check that the rated voltage of your unit matches your local voltage.

### ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.
- Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation.
- Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Take attention to the environmental aspects of battery disposal.
- Use the apparatus only in moderate climates (not in tropical climates).
- Do not expose the apparatus to dripping or splashing.
- Do not place objects filled with liquids, such as vases, on the apparatus.

**Should any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.**



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.

**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**

 
 
 
**ATTENTION :** To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

In case of malfunction due to electrostatic discharge, the apparatus has to be reset by disconnecting it from mains supply.

## LOCATION OF CONTROLS

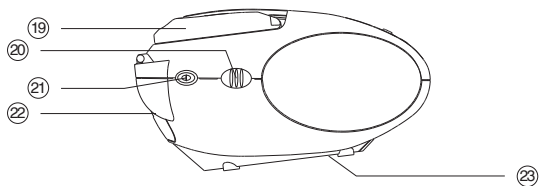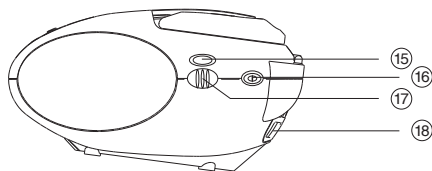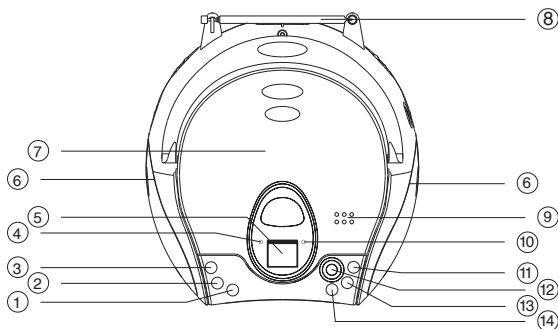

- |                              |  |
|------------------------------|--|
| 1. CD PROGRAM BUTTON         | 12. CD PLAY / PAUSE BUTTON <b>▶▶  </b> |
| 2. CD REPEAT BUTTON          | 13. CD BACK BUTTON <b>◀◀</b>           |
| 3. BBS BUTTON                | 14. CD STOP BUTTON <b>■</b>            |
| 4. POWER INDICATOR           | 15. DIAL SCALE                         |
| 5. CD DISPLAY                | 16. MODE SWITCH                        |
| 6. SPEAKER                   | 17. TUNING CONTROL                     |
| 7. CD DOOR                   | 18. AC SOCKET                          |
| 8. TELESCOPIC ANTENNA        | 19. CARRYING HANDLE                    |
| 9. OPEN / CLOSE CD BUTTON    | 20. VOLUME CONTROL                     |
| 10. FM STEREO INDICATOR      | 21. FUNCTION SWITCH                    |
| 11. CD NEXT BUTTON <b>▶▶</b> | 22. PHONES JACK                        |
|                              | 23. BATTERY COMPARTMENT                |

GB 1


## POWER SUPPLY
 
### USING HOUSE CURRENT


Before use, check that the rated voltage of your unit matches your local voltage.

### USING BATTERIES

Disconnect the AC power cord from the AC inlet of the unit. Battery power is cut automatically by the cord while it is connected.

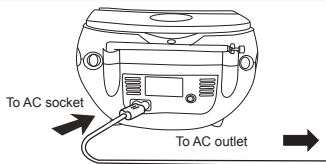


 When the volume decrease, or the sound distorts, replace all of the batteries with new ones.

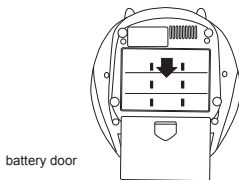


battery door

 Insert 6 UM-2  
(size C) batteries.

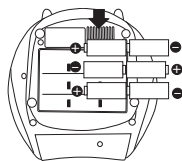

## ADJUSTING THE SOUND
 
### TO ADJUST THE VOLUME

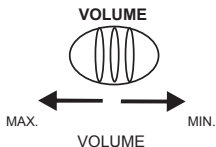

### FOR PRIVATE LISTENING

Plug in headphones (ø3.5 mm stereo mini-plug) to the PHONES jack.

 
When headphones are plugged in, the speakers are automatically disconnected.

## LISTENING TO THE RADIO


1. Set to RADIO




3. Tune in to a station.

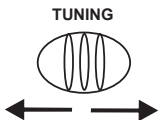

 2. Select a MODE.

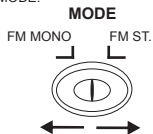

 4. Adjust the sound.

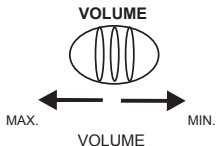

GB 2

## FOR BETTER RECEPTION



FM

- NOTE :**
1. FM stereo LED indicator lights if receive FM stereo broadcast and the MODE switch set on "FM STEREO".
  2. When too much noise is heard during FM STEREO reception, set MODE switch to FM mono.

## AFTER LISTENING

 
Set the FUNCTION selector to OFF.

## COMPACT DISC PLAYBACK

1. Set to CD




2. Open the CD door by pushing CD Door Open / Close button.

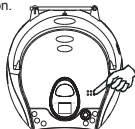

3. Insert a disc with the label side facing up.

 
4. Close the CD door.  
The disc will rotate and the total tracks of the disc will show on the display.



5. Press the Play / Pause button.  
Track number "01" & "PLAY" will be shown.



 CD display



## TO INTERRUPT PLAYBACK

Press the Play/Pause button and the symbol "PLAY" will be flashed.  
Press the button again to resume playback.

 


CD display



## TO STOP PLAYBACK

Press the STOP button and the display shows the total tracks of the disc.



## TO SKIP TO THE BEGINNING OF A TRACK

- Press either one of the skip buttons according to the desired skip direction.
- Play/back resumes from the selected track.
- When the skip button is pressed once during play, the previous track starts again.
- When the skip button is pressed once during play, the next track plays.



## SEARCHING FOR A PASSAGE WITHIN A TRACK

- Keep the search button pressed during playback, and release the button as soon as you recognise the desired passage. Then normal CD playback will resume from this point.

Unit will be automatically off within 15 mins without any operation (in stop mode / CD door open).  
After auto off, slide the FUNCTION selector to OFF position and then slide to RADIO / CD position for listening.


GB 3

## REPEAT PLAYBACK

This function allows a single track or all tracks on a disc to be played repeatedly.


### TO REPEAT THE SAME TRACK

 Press the REPEAT button once during playback, the CD display will indicate " REPEAT " .

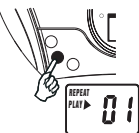

### TO REPEAT THE WHOLE DISC

 Press the REPEAT button twice until " REPEAT ALL " displays.

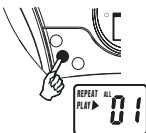

### TO CANCEL REPEAT PLAYBACK FUNCTION

Press the REPEAT button again until " REPEAT " or " REPEAT ALL " disappears from the display.

 


Note on CD-R/RW discs

- Because of non-standardized format definition/ production of CD-R/RW, playback quality and performance are not guaranteed.
- Manufacturer is not responsible for the playability of CD-R/RW due to recording conditions, such as PC performance, writing software, media ability, etc.
- Do not attach a seal or label to either side of the CD-R/RW disc. It may cause a malfunction.
- It is recommended to record only audio files on CD-R/RW discs for easy reading.

## BASS BOOST

To enjoy a BASS BOOST sound effect, press BBS button.

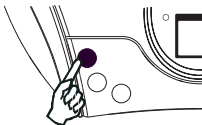

## PROGRAM PLAYBACK

### PROGRAMMED PLAYBACK

Programmed playback enables tracks on a disc to be played in the desired order. Up to 20 tracks can be programmed.

 
1. Press the " PROGRAM " button.
2. Press the " NEXT/FF " and " BACK/FB " buttons to select the desired track number.
3. Press " PROGRAM " button again to memorize the track.
4. Repeat steps 2 and 3 until all desired tracks are programmed.
5. Press the " PLAY/PAUSE " button to start. " PROGRAM " is flashing on the CD display.
6. Press " STOP " button to stop programmed playback.
7. Press " PROGRAM " and " PLAY/PAUSE " buttons to resume programmed playback.
8. Open the CD door or turn off the CD player to clear the programmed memory.

**Note :** Programming can only be made when the player is in stop mode.

### To Erase the Memory(Program)

To clear the program, you may have two ways:

1. Press STOP button when the disc is stopped, or
2. Open the CD compartment lid, program will be erased.

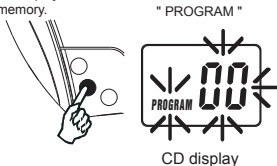

GB 4

CD display

## MAINTENANCE

 
### CLEANING A CD

If the CD skips or will not play, the disc may need cleaning.  
Before playing, wipe the disc from the centre out with a cleaning cloth. After playing, store the disc in its case.



### CLEANING THE CD LENS

If the CD lens is dusty, clean it with a brush-blower. Blow several times on the lens and remove the dust with the brush. Finger prints may be removed with a cotton swab moistened with alcohol.



### CLEANING THE UNIT

Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.

### IMPORTANT NOTE

If an abnormal display indication or an operating problem occurs, disconnect the AC power cord and remove the batteries. Wait at least 5 seconds, then reconnect the AC power cord or reinstall the batteries.

### WARNING

Should the CD door be opened before the reading of the CD is completed, a jamming noise may occur. This is resolved by closing the CD door.

## SPECIFICATIONS

### CD SECTION

Channels:

2 channels

S / N ratio:

60 dB

Wow & Flutter:

undetectable

Sampling frequency:

44.1 kHz 8 x over sampling

Quantization:

1 bit DA converter

Pick up light source:

Semi-conductor laser

Pick up wave length:

790 nm

### RADIO SECTION

Tuning ranges:

FM 87.5 - 108 MHz

Antennas:

FM Rod antenna

### GENERAL

Output power:

1 W + 1 W (RMS)

Power consumption:

13.5 W

Speaker:

3" 8 OHM

Phones jack:

3.5MM

Power source:

AC : 230V ~ 50Hz

DC : 9V ( 6 x 1.5V LR14/ "C"/UM2 )

Dimensions:

224(L) x 234(D) x 126(H)mm

Weight

2.4 KGS

Due to continuing improvement, the features and the design are subject to change without notice.

Where to place the item :

Today's furniture is coated with a wide variety of lacquers and synthetic-coatings that are treated with an extensive range of cleaning products. Therefore, the possibility that some of these substances contain components that react adversely to the rubber feet of the item and soften them, cannot be completely excluded. The rubber feet of the appliance can cause discoloring to furniture surfaces. If necessary, place the appliance on a non-slide surface.

## Service and support

For information: [www.lenco.com](http://www.lenco.com)

For support: <http://lencosupport.zendesk.com>

### Lenco helpdesk:

Germany	0900-1520530	(Local charges)
The Netherlands	0900-23553626	(Local charges + 1ct p/min)
Belgium	02-6200115	(Local charges)
France	03-81484280	(Local charges)

The helpdesk is accessible from Monday till Friday from 9 AM till 6 PM.

When contacting Lenco, you will always be asked for the model and serial number of your product. The serial number can be found on the back of the device. Please write down the serial number below:

Model: SCD-24

Serial number: \_\_\_\_\_

Lenco offers service and warranty in accordance to European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.

**Important note:** It is not possible to send products that need repairs to Lenco directly.

### Important note:

If this unit is opened or accessed by a non-official service center in any way, the warranty expires.

This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.



This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).



Products with the CE marking comply with the EMC Directive (2004/108/EC) and the Low Voltage Directive (2006/95/EC) issued by the Commission of the European Community.

The declaration of conformity may be consulted at

<http://www.lenco.eu/supportfiles/CE/59885nifndsgj548349.pdf>



**WARNING:** Prolonged exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.

©All rights reserved  
[www.lenco.com](http://www.lenco.com)